

Accessing UDOT Stormwater Drainage System Map


There are two versions of the map - **View only and Editable**

Follow these steps to login to **View Only Map**


UDOT UPLAN Homepage: <http://uplan.maps.arcgis.com/home/index.html>



Type in "Stormwater" into search field

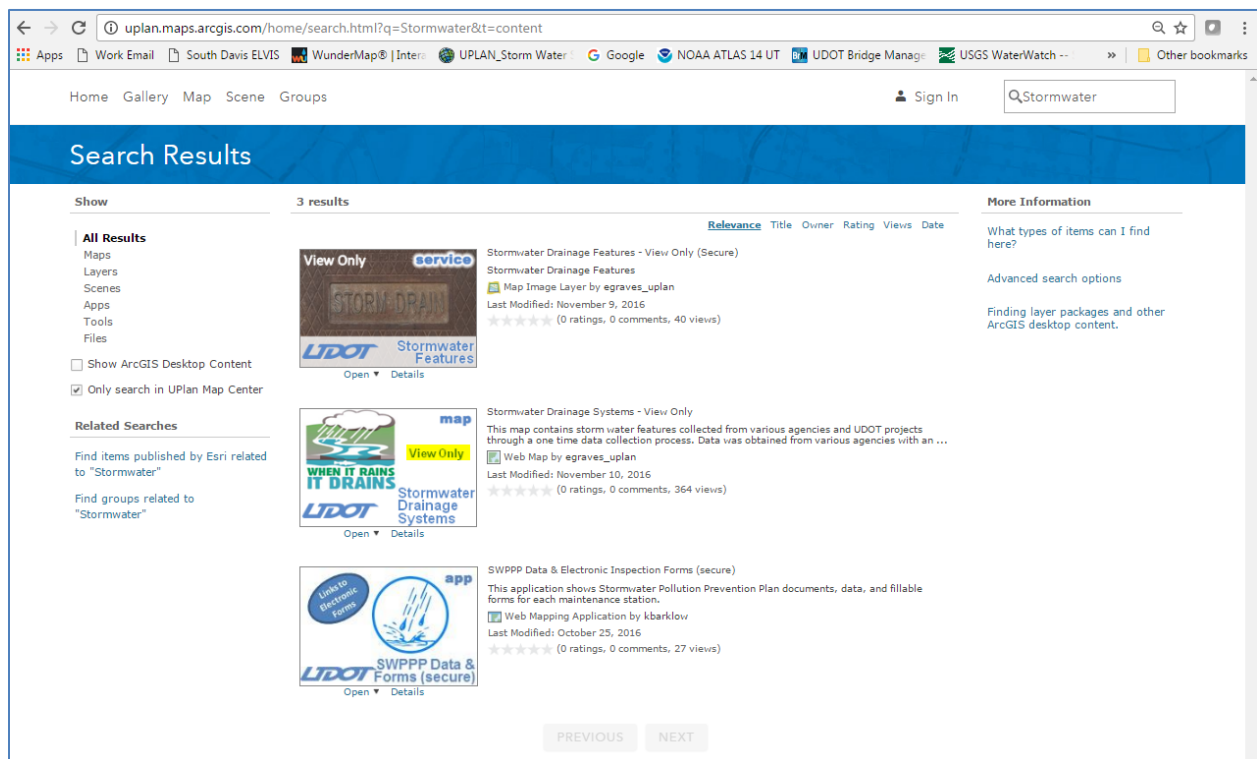


Select the "View Only" map

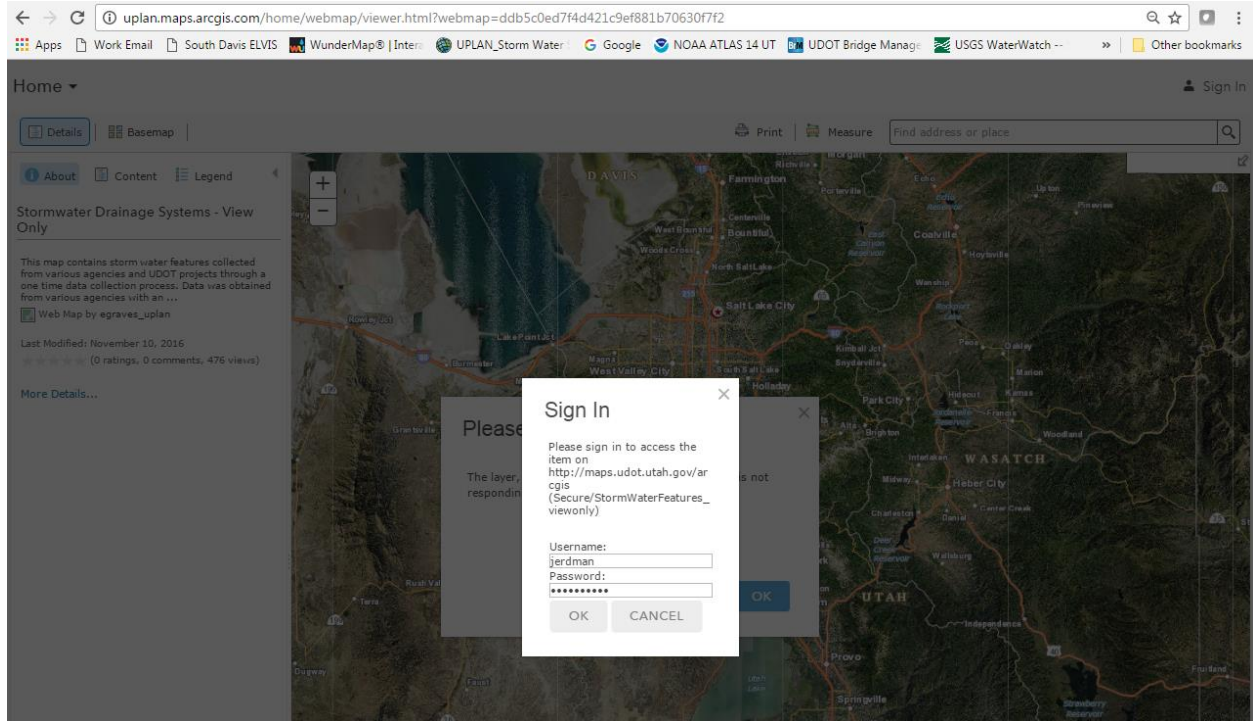

Login into Map:

Username: Use the same user name start as you UDOT Network username.

Password: This is a same as your Network password.

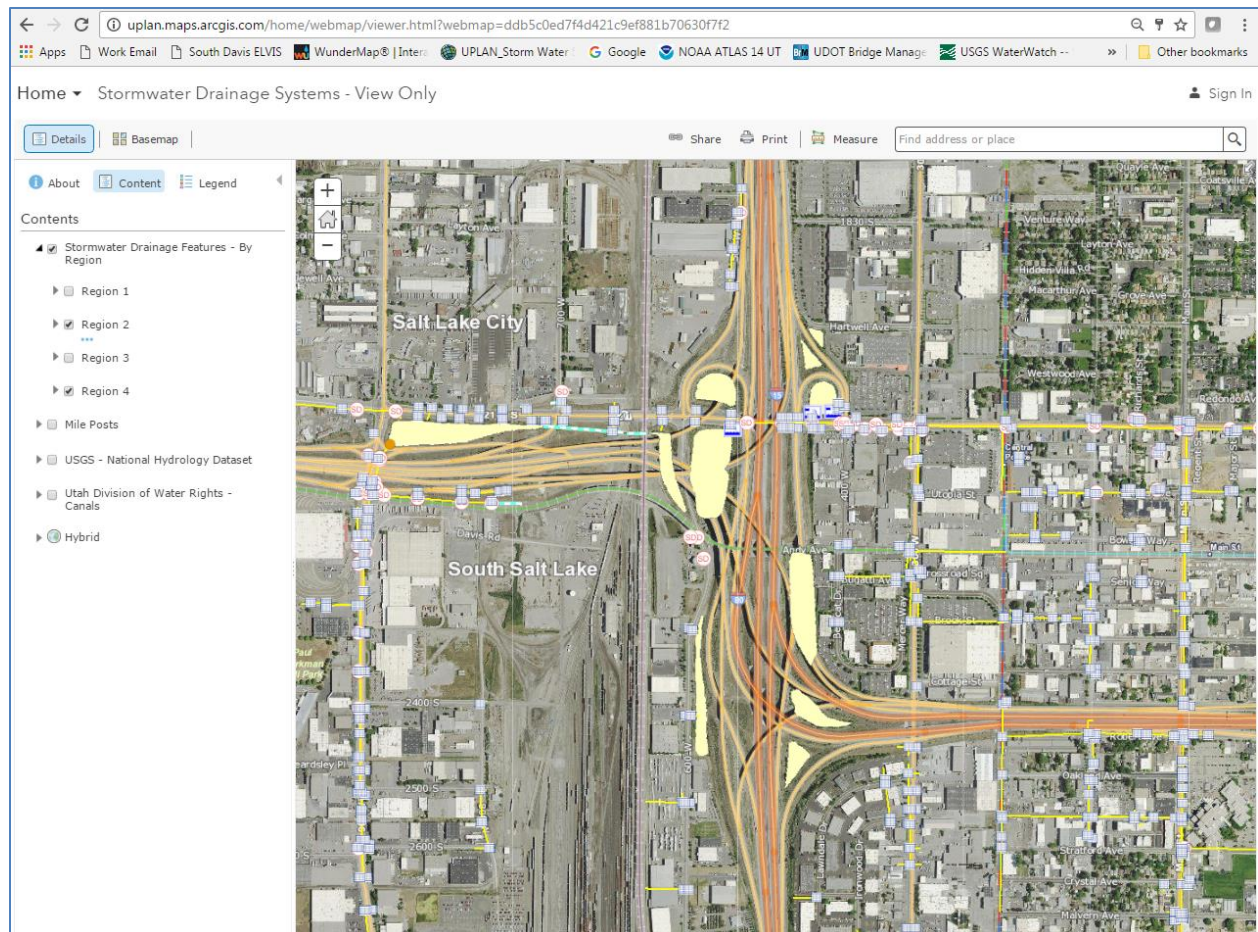

Once the map is open you may not see all of the data layers. To display other data layers Select “Show Contents of Map” located near the top left, middle icon. You can then choose with data layers you would like on or off.